


Taladro atornillador simTA10

Explosionado - Exploded view

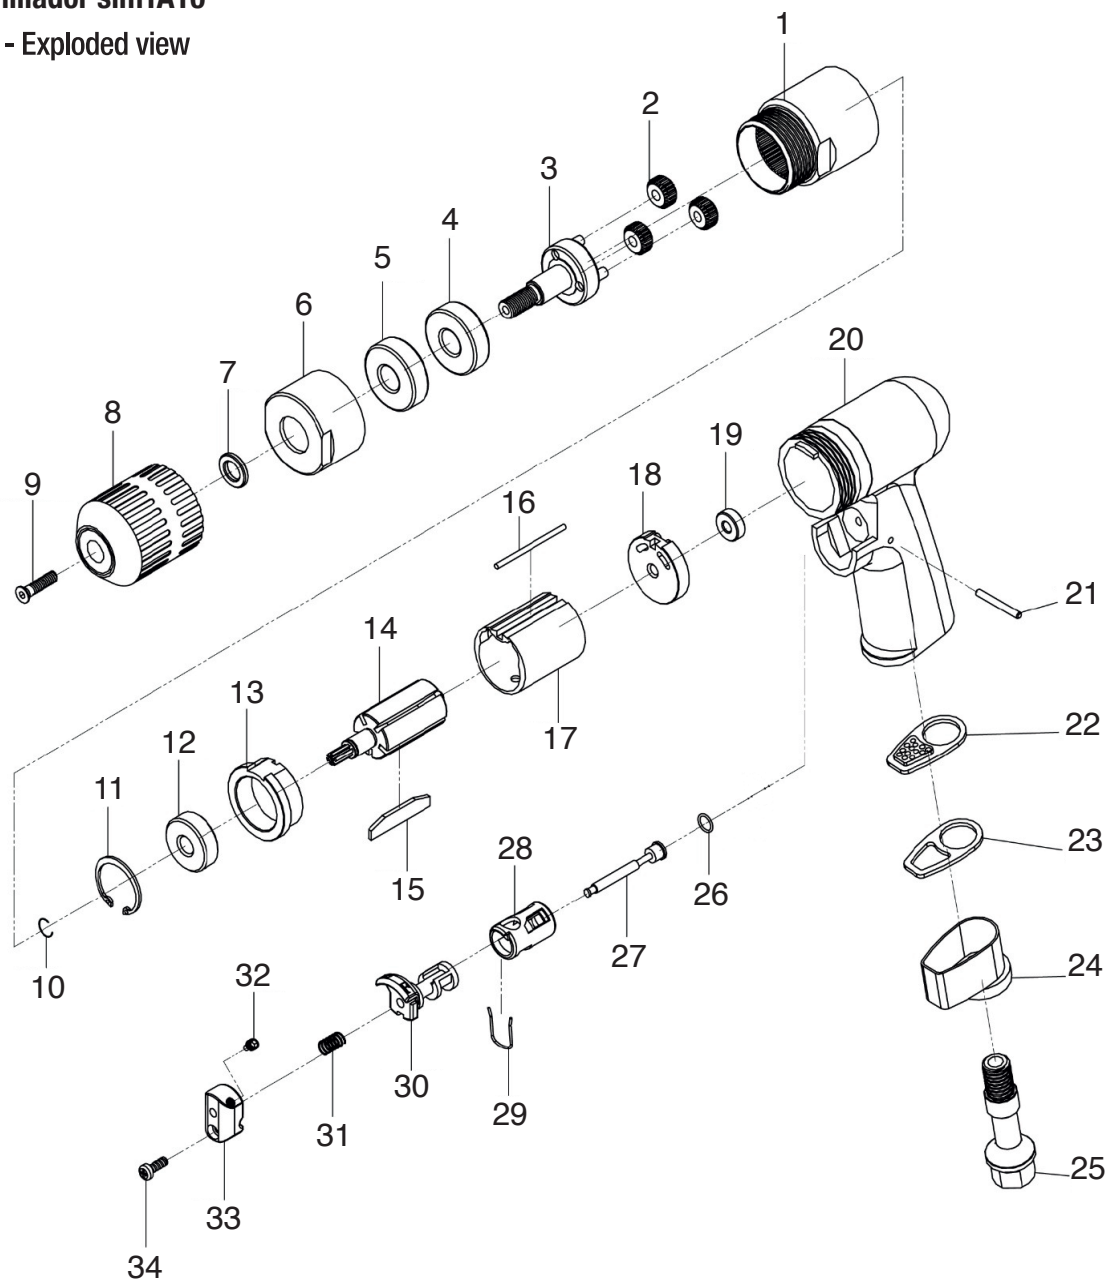

simTA10

3500820

Despiece - Spare part list

REF. COD.	DESC.	REF. COD.	DESC.	REF. COD.	DESC.
1	75322801 GEAR HOUSING / CARCASA EMBRAGUE	13	75322813 FRONT PLATE / PLETINA FRONTAL	25	75322825 HOUSE ADAPTER / ADAPTADOR
2	75322802 PLANET GEAR / PLANETARIO EMBRAGUE	14	75322814 ROTOR / MOTOR	26	75322826 O-RING / ARANDELA
3	75322803 GEAR SEAT / ASIENTO EMBRAGUE	15	75322815 ROTOR BLADE / PLETINA MOTOR	27	75322827 VALVE / VÁLVULA
4	75322804 BALL BEARING / RODAMIENTO	16	75322816 PIN / PASADOR	28	75322828 VALVE BUSHING / COJINETE VÁLVULA
5	75322804 BALL BEARING / RODAMIENTO	17	75322817 CYLINDER / CILINDRO	29	75322829 SPRING CLIP / MUELLE CLIP
6	75322806 FRONT CAP / TAPA FRONTAL	18	75322818 REAR PLATE / PLETINA TRASERA	30	75322830 RETAINING VALVE / JUNTA VÁLVULA
7	75322807 WASHER / ARANDELA	19	75322819 BALL BEARING / RODAMIENTO	31	75322831 TRIGGER SPRING / MUELLE GATILLO
8	75322808 CHUCK / MANDRIL	20	75322820 MOTOR HOUSING / CARCASA MOTOR	32	75322832 TRIGGER SPRING / MUELLE GATILLO
9	75322809 SCREW / TORNILLO	21	75322821 TRIGGER PIN / PASADOR GATILLO	33	75322833 TRIGGER / GATILLO
10	75322810 RETAINING RING / JUNTA	22	75322822 DIFFUSER / DIFUSOR	34	75322834 RETAINING SCREW / JUNTA TORNILLO
11	75322811 RETAINING RING / JUNTA	23	75322823 GASKET / JUNTA		
12	75322812 BALL BEARING / RODAMIENTO	24	75322824 MUFFLER COVER / TAPA SILENCIADOR		