


Grapadora manual simGM50 | Manual stapler simGM50

Explosionado - Exploded view

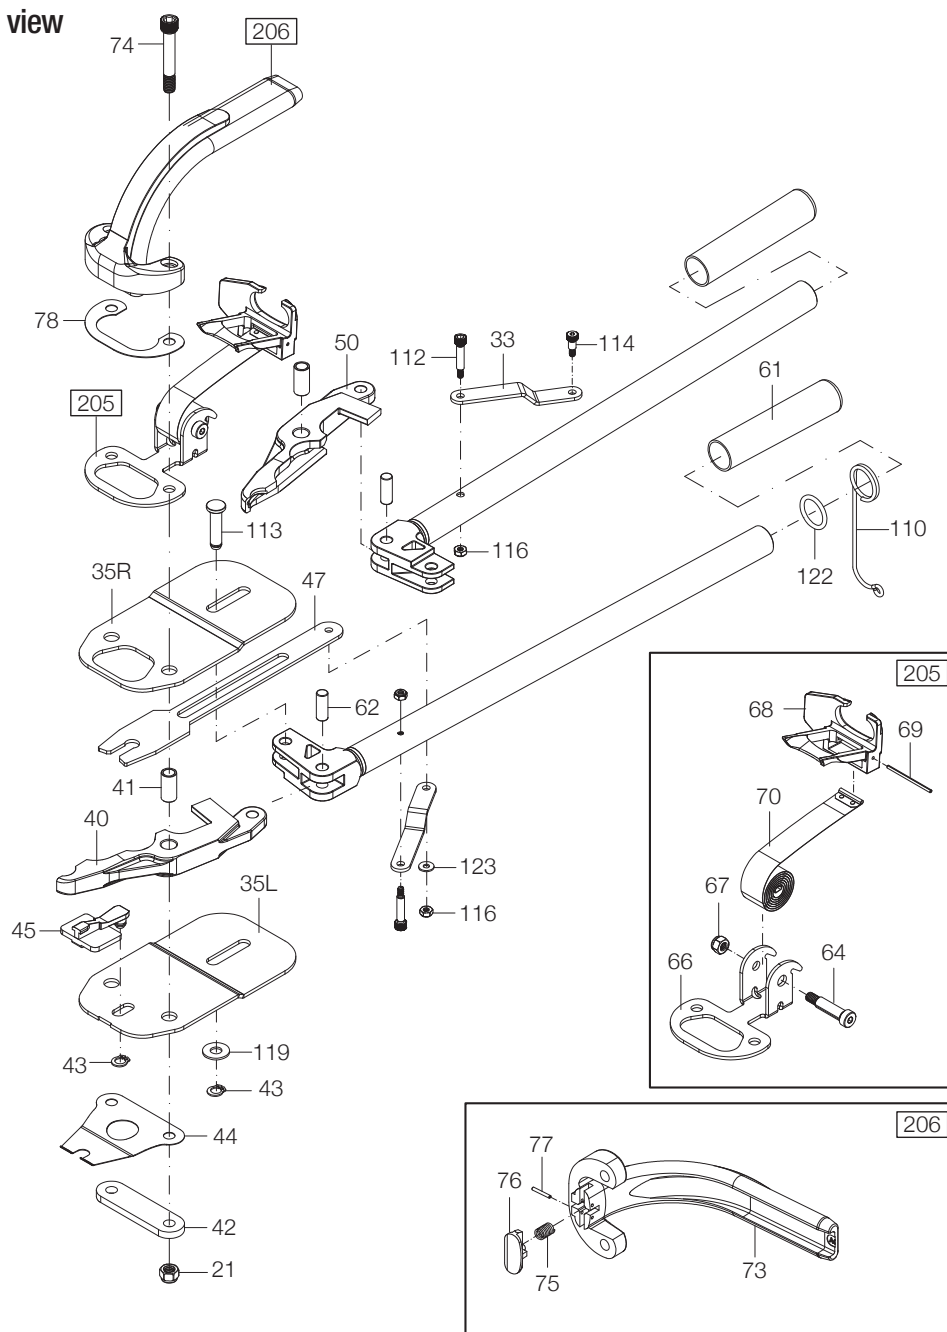

Nº	COD.	DESC.
21	AC50124	TUERCA / NUT
33	AC50H033	ENLACE DE CONEXIÓN / CONNECTING LINK
35R	AC50H35R	PLACA LATERAL (DERECHA) / SIDE PLATE (RIGHT)
35L	AC50H35L	PLACA LATERAL (IZQUIERDA) / SIDE PLATE (LEFT)
40	AC50H040	UÑA SUPERIOR / UPPER JAW
41	AC50041	CASQUILLO UÑA / JAW BUSHING
42	AC50042	SOPORTE DE PLACA / PLATE SUPPORT
43	AC50043	CLIP DE PASADOR DE PESTILLO / LATCH PIN CLIP
44	AC50H044	RESORTE DE PESTILLO / LATCH SPRING
45	AC50045	PESTILLO / LATCH
47	AC50H047	CUCHILLA DEL ALIMENTADOR / FEEDER BLADE
50	AC50H050	UÑA INFERIOR / LOWER JAW
61	AC50H061	EMPUÑADURA / HANDLE GRIP

Nº	COD.	DESC.
62	AC50H062	PASADOR / DOWEL PIN
205	680150210	CONJUNTO DE EMPUJADOR / PUSHER ASSY
64	AC50064	TORNILLO / SCREW
66	680150207	JUEGO DE EMPUJADORES / PUSHER SET
67	AC01067	TUERCA / NUT
68	680150208	EMPUJADOR (ÚNICO) / PUSHER (SINGLE)
69	AC50069	REMACHE EXTRUIDO / EXTRUDED RIVET
206	AC50TH206	CONJUNTO CARGADOR / MAGAZINE ASSY
70	AC50070	MUELLE / SPRING
73	680150209	CARGADOR (CORTO) / MAGAZINE BODY (SHORT)
74	AC50074	PERNO DE MORDAZA / JAW BOLT
75	AC50075	MUELLE POSTIZO CARGADOR / MAGAZINE SPRING
76	AC50076	POSTIZO CARGADOR / MAGAZINE SHOE
77	680150211	PASADOR / ROLL PIN